

## Description - Proline LED Surface Linear

Proline LED

This luminaire ntains built-in

The LED lamps cannot be

# Installation Instructions

# Luminaire Code(s) - APRLED

# General Installation Instructions

These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.

# Important Safety

- Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
- 2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire
- is installed in compliance with the current edition of the IEE Wiring Regulations.

  The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire 3. does not exceed the rating of the circuit cable, fuse or circuit breaker.
- 4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
- 5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.

#### Ratings

- All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
- All luminaires that are of Class 1 construction and that are marked accordingly, MUST be earthed.
- 3 All tracks are designed to operate at 230Volts AC +10% / -6% = 216Volts to 252Volts. Do not operate outside these voltages.
- All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.
- For internal use ONLY

#### **Exclusions to Warranty**

Please Note - The limited warranty shall be null and void in the following circumstances:-

Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 - 25°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

#### **Installation**

- Turn off power supply.
- Remove the access caps at either end of the luminaire by releasing the single screw and using a small flat headed screwdriver, unclip the end cap.
- Release the four fixing screws to separate the luminaire spine from the front LED assembly.
- Disconnecting the LED PCB connectors and retaining cords.
- Select a suitable location to mount the luminaire spine using the fixings supplied.
- Please note this luminaire should not be installed in locations close to any heat source.
- Feed the incoming supply cable through into the luminaire spine at the desired entry point at the rear of the fixture.
- Connect the mains supply to supply terminals.
- Please see connections below taking care to observe polarity.


Connect as follows:-**BROWN OR RED** (switched) NEUTRAL (N) BLUF OR BLACK GREEN / YELLOW EARTH

- Once connected offer the front assembly up to the spine attach the retaining cords to the front assembly.
- Re-connect the male / female connectors from the LED driver to the LED board(s).
- Locate the front assembly and fix back onto the spine.
- Replace the 2 end caps and fix into position using the single fixing screw.
- Restore power supply, switch on and test for satisfactory operation.

## **Warning**

- Failure to comply with these instructions may result in irreparable damage to the control gear.
- This product must not be modified in any way as this will negate any Safety approvals, and may render the product inoperable or unsafe. The product must be installed in accordance with the instructions.

Code	Lamp	Description	Α	В	C	D	
APRLED4	LED	1 x 25W	1220	600	73	148	
APRLED5	LED	1 x 35W	1525	904	73	148	
APRLED2X4	LED	1 x 52W	1220	600	73	148	
APRLED2X5	LED	1 x 65W	1525	904	73	148	

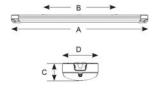






### Maintenance:

- 1. This luminaire contains no serviceable parts.
- 2. If replacing the LED Driver, please ensure the driver has a secondary output is 500mA (APRLED4 & APRLED5) / 1050mA (APRLED2X4 and APRLED2X5) constant current with a power rating of 35W (ASLED4 & ASLED5) / 60W (ASLED2X4 and ASLED2X5).



# Disposal of Electronic Equipment WEEE Directive 2002/96/EC

This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant.

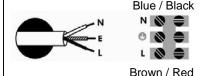

www.anselluk.com Issue Date: td 20150707

